






# TrafiCam


## Overview TrafiCam Kits & Components Rest of the world

<b>Document Name:</b>	Overview TrafiCam Kits & Components Rest of the world
<b>Version Number:</b>	7
<b>Author:</b>	Robin Collaert
<b>Function:</b>	Product Manager
<b>Date:</b>	29-06-2009



**Total Number of Pages: 5**

# 1 Traficam Kits

Ref. No	Image	Description		
11-6030		<table border="1"> <tr> <td data-bbox="788 389 954 696">10-6030</td> <td data-bbox="954 389 1442 696"> <b>Traficam2 WIDE 3,0mm (103°)</b> <ol style="list-style-type: none"> <li>Traficam with WIDE field of view</li> <li>Mounting Bracket</li> <li>CD-ROM with manuals, configuration software, recording &amp; playback tool</li> <li>Hex keys (2 pieces)</li> </ol> </td> </tr> </table>	10-6030	<b>Traficam2 WIDE 3,0mm (103°)</b> <ol style="list-style-type: none"> <li>Traficam with WIDE field of view</li> <li>Mounting Bracket</li> <li>CD-ROM with manuals, configuration software, recording &amp; playback tool</li> <li>Hex keys (2 pieces)</li> </ol>
		10-6030	<b>Traficam2 WIDE 3,0mm (103°)</b> <ol style="list-style-type: none"> <li>Traficam with WIDE field of view</li> <li>Mounting Bracket</li> <li>CD-ROM with manuals, configuration software, recording &amp; playback tool</li> <li>Hex keys (2 pieces)</li> </ol>	
		10-6025	<b>TI (9 wires) interface</b>	
		10-6016	<b>Traficam RS232-485 converter and Null-Modem Cable (1,8m)</b>	
-	<b>Power adapter 230VAC→12VDC</b>			
11-6031		<table border="1"> <tr> <td data-bbox="788 902 954 1261">10-6031</td> <td data-bbox="954 902 1442 1261"> <b>Traficam2 NARROW 8,0mm (39°)</b> <ol style="list-style-type: none"> <li>Traficam with NARROW (zoom) field of view</li> <li>Mounting Bracket</li> <li>CD-ROM with manuals, configuration software, recording &amp; playback tool</li> <li>Hex keys (2 pieces)</li> </ol> </td> </tr> </table>	10-6031	<b>Traficam2 NARROW 8,0mm (39°)</b> <ol style="list-style-type: none"> <li>Traficam with NARROW (zoom) field of view</li> <li>Mounting Bracket</li> <li>CD-ROM with manuals, configuration software, recording &amp; playback tool</li> <li>Hex keys (2 pieces)</li> </ol>
		10-6031	<b>Traficam2 NARROW 8,0mm (39°)</b> <ol style="list-style-type: none"> <li>Traficam with NARROW (zoom) field of view</li> <li>Mounting Bracket</li> <li>CD-ROM with manuals, configuration software, recording &amp; playback tool</li> <li>Hex keys (2 pieces)</li> </ol>	
		10-6025	<b>TI (9 wires) interface</b>	
		10-6016	<b>Traficam RS232-485 converter and Null-Modem Cable (1,8m)</b>	
-	<b>Power adapter 230VAC→12VDC</b>			
13-6030		<table border="1"> <tr> <td data-bbox="788 1469 954 1809">10-6030</td> <td data-bbox="954 1469 1442 1809"> <b>Traficam2 WIDE 3,0mm (103°)</b> <ol style="list-style-type: none"> <li>Traficam with WIDE field of view</li> <li>Mounting Bracket</li> <li>CD-ROM with manuals, configuration software, recording &amp; playback tool</li> <li>Hex keys (2 pieces)</li> </ol> </td> </tr> </table>	10-6030	<b>Traficam2 WIDE 3,0mm (103°)</b> <ol style="list-style-type: none"> <li>Traficam with WIDE field of view</li> <li>Mounting Bracket</li> <li>CD-ROM with manuals, configuration software, recording &amp; playback tool</li> <li>Hex keys (2 pieces)</li> </ol>
		10-6030	<b>Traficam2 WIDE 3,0mm (103°)</b> <ol style="list-style-type: none"> <li>Traficam with WIDE field of view</li> <li>Mounting Bracket</li> <li>CD-ROM with manuals, configuration software, recording &amp; playback tool</li> <li>Hex keys (2 pieces)</li> </ol>	
10-6028	<b>1TI interface</b>			






13-6031		10-6031	<b>Traficam2 NARROW 8,0mm (39°)</b> <ol style="list-style-type: none"> <li>1. Traficam with NARROW (zoom) field of view</li> <li>2. Mounting Bracket</li> <li>3. CD-ROM with manuals, configuration software, recording &amp; playback tool</li> <li>4. Hex keys (2 pieces)</li> </ol>
		10-6028	<b>1TI interface</b>

## 2 Cabling


Ref. No	Image	Description
T2-CABLE4		<b>STP UV-Resistant Cable (Price per meter)</b> 4-wired cable for connection between Traficam sensor and <u>4TI</u> or <u>1TI</u>
T2-CABLE10		<b>STP UV-Resistant Cable (Price per meter)</b> 10-wired cable for connection between Traficam and <u>TI</u> (9 wires)




## 3 Traficam Sensor, Interface & Accessories

Ref. No	Image	Description
10-6030		<b>Traficam2 WIDE 3,0mm (103°)</b> <ol style="list-style-type: none"> <li>1. Traficam with WIDE field of view</li> <li>2. Mounting Bracket</li> <li>3. CD-ROM with configuration software, manuals, recording &amp; playback tool</li> <li>4. Hex key (2 pieces)</li> </ol>
10-6031		<b>Traficam2 NARROW 8,0mm (39°)</b> <ol style="list-style-type: none"> <li>1. Traficam with NARROW field of view</li> <li>2. Mounting Bracket</li> <li>3. CD-ROM with configuration software, manuals, recording &amp; playback tool</li> <li>4. Hex key (2 pieces)</li> </ol>

10-6025		<b>TI (9 wires) interface</b> Interface board for connection of 1 TraftiCam sensor, using 9 wires. Provides 4 outputs. RS485 connector to go to portable PC. <i>(TraftiCam RS232-485 converter + null modem cable: ref. 10-6016)</i>
10-6027		<b>4TI interface</b> Interface board for connection up to 4 TraftiCam sensors, using 4-wired cable, providing 16 outputs (i.e. 4 outputs per TraftiCam sensor) USB connection to go to portable PC. <i>(USB-A/USB-B cable: ref. LEA050923)</i>
10-6028		<b>1TI interface</b> Interface board for connection of 1 TraftiCam sensor using 4-wired cable, providing 4 outputs. USB connection to go to portable PC. <i>(USB-A/USB-B cable: ref. LEA050923)</i>
10-6016		<b>TraftiCam RS232-485 converter and Null-Modem cable (1,8m)</b> For connection of <u>TI (9wires)</u> to portable PC
LEA050923		<b>USB A – USB B converter</b> For connection of <u>1TI or 4TI</u> interface board to portable PC over USB

## 4 TraftiCam Wireless 868MHz (Europe, South-Africa)

Ref. No	Image	Description
10-6032		<b>TraftiCam Wireless 868MHz 1/3" 3,0mm (103°)</b> <ol style="list-style-type: none"> <li>1. TraftiCam Wireless with wide field of view</li> <li>2. Mounting bracket</li> <li>3. CD-ROM with configuration software and manuals</li> <li>4. Hex key (2 pieces)</li> </ol>

10-6033		<p><b>Traficam Wireless 868MHz 1/3" 8,0mm (39°)</b></p> <ol style="list-style-type: none"> <li>1. Traficam Wireless with narrow field of view</li> <li>2. Mounting bracket</li> <li>3. CD-ROM with configuration software and manuals</li> <li>4. Hex key (2 pieces)</li> </ol>
10-6027		<p><b>4TI interface</b></p> <p>Interface boards for connection to 1 Traficam Wireless sensor, using 4-wired cable, providing 16 outputs (i.e. 4 outputs per Traficam Wireless sensor)  USB connection to go to portable PC.  <i>(USB-A/USB-B cable: ref. LEA050923)</i></p>
LEA050923		<p><b>USB A – USB B converter</b></p> <p>For connection of <u>1TI</u> or <u>4TI</u> interface board to portable PC over USB</p>